

# HYPER IG-COIL Instruction manual

Product number	05-02-0015 (Black)
	05-02-0008 (Orange)
	05-02-0020 (Blue)
	05-02-0021 (Red)
	05-02-0022 (Yellow)

Adaptation model	Monkey/Gorilla	(Z50J-2000001 ~ ) (AB27-1000001 ~ 1899999)
	Ape50	(AC16-1000001 ~ 1599999)
	Ape100	(All model year)
	XR50/XR100 Motard	(All model year)
	Super cub 50	(C50-8900015 ~ ) (C50-0200001 ~ ) C. D. I. ignition model) (AA01-1000001 ~ 1699999)
	Little cub	(C50-4300001 ~ ) (AA01-3000001 ~ 3999999)

Thank you very much for purchasing our products.

Thank you so you will comply with the following matters at the time of use. Before installation, please check your always kit contents.

If there is a point of notice event, Please contact us the dealer of purchase.

◎ If the description, such as photos or Illustration different with this part.

☆ Please read carefully before use ☆

- ◎ The use ignoring the instructions that are written in the manual, if the accident or damage has occurred, we can not assume any responsibility for compensation.
- ◎ This product installation and use, when a problem occurs to after market goods, guarantee other than this product, also can not assume any in any such matters.
- ◎ If it was the case or mounting that has been processed like a product, it will not be covered under warranty.
- ◎ It is not possible to inquire of the combination of other manufacturers.
- ◎ This product is the above-mentioned vehicle exclusive goods. Is not possible attached to the other vehicle. Please note. (Cannot be used for FI model.)
- ◎ The instruction manual and genuine service manual are uses for those who have basic skills and knowledge. If you do not have confidence in the installation, or if you do not have the necessary tools for installation, please do not start work and ask a designated factory or a certified factory to perform vehicle maintenance.
- ◎ Product may have edges or protrusions. Be sure to wear working gloves.  
(Please wear work gloves when working, even if a photo in this article show without work gloves.)

~ feature ~

- The same size of design and genuine ignition coil, reinforced type was up the discharge voltage.
- Improvement such as output and fuel consumption is aiming.
- There are 5 types, black that keeps stock style, orange / blue / red / yellow for the high custom looks.

**Caution** When the handling of ignoring this display, property damage and human shows the assumption of what injury.

- When performing the work, etc., be sure during the cold (when the engine and the muffler is cold). (It may cause burns.)
- When performing the work, it should be made to prepare the tools for the job. (Breakage of parts, it may cause injury.)
- Do the work must always specified torque using a torque wrench. (Damage of bolts and nuts, and cause of dropout.)
- The product and the frame, might have edges or protrusions. When working, please wear work gloves to protect your hands. (It may cause injury.)
- Be sure to each part inspection before operation, check the loosening of the threaded portion, be sure to securely tighten the specified torque if there is loose. (It may cause detachment of the parts.)

**SPECIAL PARTS**  
**TAKEGAWA**

CONTACT Address : 3-5-16 Nishikiorihigashi Tondabayashi Osaka JAPAN  
TEL: +81-721-25-1357 FAX: +81-721-24-5059  
e-mail: english@takegawa.co.jp URL <http://www.takegawa.co.jp>  
Please contact with your name and country name provided. (Only English please)



**Warning**

When the handling of ignoring this display people died, shows the contents of the serious injury possibility is assumed.

- During operation, when an abnormality occurs, immediately stop the vehicle in a safe place, please stop running. (It may lead to an accident.)
- When performing the work, do the work safely stabilize the vehicle in a horizontal location. (There is a risk of injury vehicle collapsed while working.)
- Inspection, maintenance, the instruction manual or, inspection methods such as service manuals, to protect the way, should be done correctly. (unsuitable inspection and maintenance, there is a risk that result to an accident.)
- When carrying out the inspection and maintenance, etc., if found damaged parts, replace the damaged parts to avoid possible to reuse the parts. (It may lead to an accident.)
- Plastic bags of product packaging, you can either be stored in a place that is out of reach of children, it should be discarded. (When the children or wearing, there is a risk of suffocation.)

◎ Please note. Performance up, the design change, the product and the price in the cost up, etc. are subject to change without notice.

◎ Keep this manual stored until this product is discarded.

## Product content



Product content	Qty
HYPER IG-COIL	1

■ Mounting procedure ※ Mounting methods and specified torque of detail, refer to genuine service manual.

- By using a maintenance stand etc. to stabilize vehicle in a safe place horizontal.
- Refer to genuine service manual, remove ignition coil primary wire, ignition coil is removed from frame.
- The spark plug cap remove from ignition wire.



- Install the hyper ignition coil to the frame and tighten bolts specified torque.
- ※ In the case of Ape, tighten along with ground terminal of frame.


**Note:** Be sure that you protect specified torque.

Bolt  
Torque : 6N · m (0.6kgf · m)

- In reference to length of genuine products, it will cut the ignition wire to a suitable length.

- Install the spark plug cap and ignition coil primary wire in the reverse procedure of removal.

※ Connect the green wire to the green terminal of the two terminals of the ignition coil.

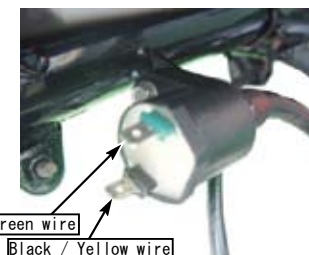

◎ You can see this instruction manual on our website as PDF data .

If this document hard to read, please download it from our website.

