

Wheel Hub Instruction manual

(For 06-01-0192)

Product number 06-08-1131

Adaptation model Monkey / Gorilla (Z50J-1300017 ~)

Thank you very much for purchasing our products.

Thank you so you will comply with the following matters at the time of use. Before installation, please check your always kit contents. If there is a point of notice event, Please contact us the dealer of purchase.

◎ If the description, such as photos or Illustration different with this part.

☆ Please read carefully before use ☆

- ◎ The use ignoring the instructions that are written in the manual, if the accident or damage has occurred, we can not assume any responsibility for compensation.
- ◎ This product installation and use, when a problem occurs to after market goods, guarantee other than this product, also can not assume any in any such matters.
- ◎ If it was the case or mounting that has been processed like a product, it will not be covered under warranty.
- ◎ It is not possible to inquire of the combination of other manufacturers.
- ◎ This product is the above-mentioned vehicle exclusive goods. Is not possible attached to the other vehicle. Please note.
- ◎ Product may have edges or protrusions. Be sure to wear working gloves.
(Please wear work gloves when working, even if a photo in this article show without work gloves.)
- ◎ This product comprises a kit of a front wheel hub for exclusive use in a motorcycle equipped with ϕ 30 front forks.
For installation of this product, either our wheels (06-09-033) for motorcycles equipped with our 10" rear drum brakes is required. Additionally, as for a swing arm, use either a 12cm-long or 16cm-long swing arm, and install a rear shock absorber which fits the installed swing arm.
- ◎ When ordering repair parts, please quote Item Nos above or reference Nos in the figures in this Manual. Should you have any questions about this, please kindly contact your local motorcycle dealer.

Caution When the handling of ignoring this display, property damage and human shows the assumption of what injury.

- When performing the work, etc., be sure during the cold (when the engine and the muffler is cold). (It may cause burns.)
- When performing the work, it should be made to prepare the tools for the job. (Breakage of parts, it may cause injury.)
- Do the work must always specified torque using a torque wrench. (Damage of bolts and nuts, and cause of dropout.)
- The product and the frame, might have edges or protrusions. When working, please wear work gloves to protect your hands.
(It may cause injury.)
- Be sure to each part inspection before operation, check the loosening of the threaded portion, be sure to securely tighten the specified torque if there is loose. (It may cause detachment of the parts.)
- Always use new gaskets and packings. And check those parts, which will be reused, for wear and damage. If you find worn or damaged parts, replace them with new ones.
- Be careful that the brake fluid does not contact your skin. After work, wash your hands thoroughly with water.
(Otherwise, you will have a rough skin.)
- Please handle the brake fluid with great care, because the fluid, if spilled on painted surfaces, resin parts, or rubber products, will deteriorate or damage these parts. If the fluid is spilled on them, wash them immediately with water.
(Otherwise, the spill of the fluid will cause the deterioration or damage of these parts.)


Warning When the handling of ignoring this display people died, shows the contents of the serious injury possibility is assumed.

- During operation, when an abnormality occurs, immediately stop the vehicle in a safe place, please stop running.
(It may lead to an accident.)
- When performing the work, do the work safely stabilize the vehicle in a horizontal location.
(There is a risk of injury vehicle collapsed while working.)
- Inspection, maintenance, the instruction manual or, inspection methods such as service manuals, to protect the way, should be done correctly. (unsuitable inspection and maintenance, there is a risk that result to an accident.)
- When carrying out the inspection and maintenance, etc., if found damaged parts, replace the damaged parts to avoid possible to reuse the parts. (There is a risk that lead to accidents Continued use.)
- Plastic bags of product packaging, you can either be stored in a place that is out of reach of children, it should be discarded.
(When the children or wearing, there is a risk of suffocation.)
- Please use only the specified brake fluid. Don't use the different brands of brake fluids together.
(Otherwise, the mixed use of the brake fluids will cause technical troubles or chemical reaction.)
- Do not get oil or grease on the brake disk rotor or brake pad. If oil &/or grease adhere to these parts, change the brake pad and degrease the brake disk rotor. (Otherwise, oil or grease adherence may lead to accidents.)
- We recommend you to get the brake installed by a skilled mechanic at facilities with special instruments and tools.
(Otherwise, the wrong installation will cause accidents.)

- ◎ Please note. Performance up, the design change, the product and the price in the cost up, etc. are subject to change without notice.
- ◎ Please be informed that we shall be held harmless against any claim against us whatsoever arising out of use of the products in racing and the like.
- ◎ Keep this manual stored until this product is discarded.

SPECIAL PARTS
TAKEGAWA

CONTACT Address : 3-5-16 Nishikiorihigashi Tondabayashi Osaka JAPAN
TEL: +81-721-25-1357 FAX: +81-721-24-5059 e-mail: english@takegawa.co.jp URL: http://www.takegawa.co.jp
Please contact with your name and country name provided. (Only English please)

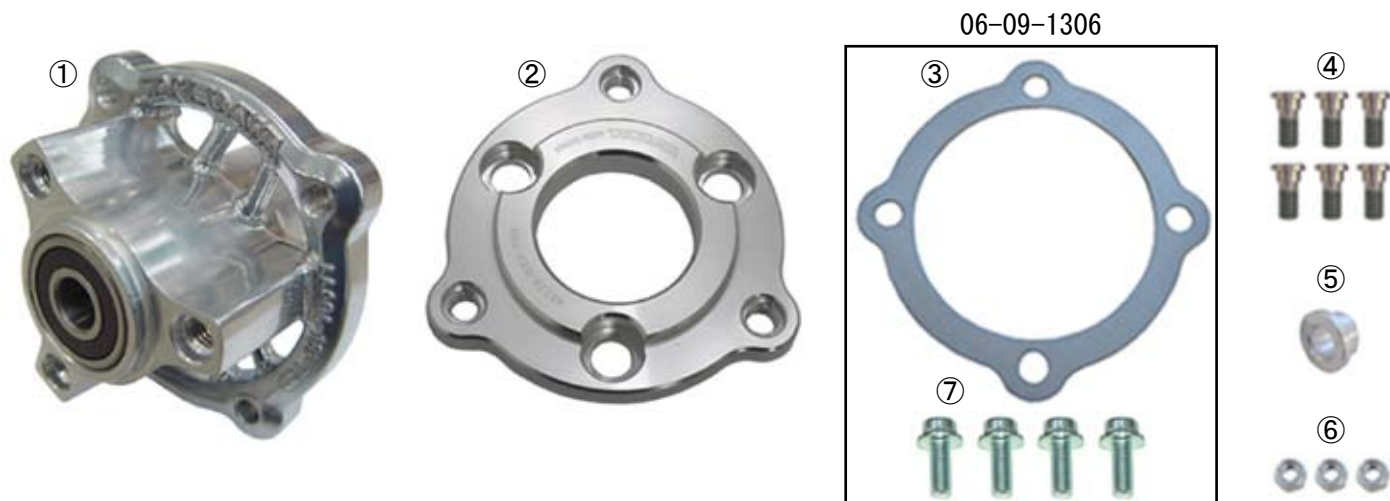

Number	Product content	Quantity	Item Number
1	Front wheel hub	1	00-06-0216
2	Disk rotor spacer	1	00-00-2069
3	Spacer	1	
4	Disk bolt, 8x20	6	00-00-2299
5	Front wheel hub collar	1	00-00-2057
6	Lock nut, M8	3	00-00-0182 (4 pcs)
7	Flange socket cap screw, 8x20	4	00-00-0829 (5 pcs)

※ Please order in the repair parts are always repair part number.

If it is not the part number order, you may not be able to order. Please be forewarned.

It should be noted, In the case of parts that can not be separately shipment, please order a set part number.

※ Repair parts may differ slightly from the kit contents in terms of shape, etc.

There is no problem to use it. Please be forewarned.

■ Mounting procedure ※ Please refer to the Genuine Service Manual for detailed mounting methods and specified torques that are not specifically described.

○ Attach the disk rotor spacer to the front wheel hub with a supplied disk bolt, tightening it to the specified torque.

⚠ Note: Be sure that you protect specified torque.

Disk bolt
Torque : 25N · m (2.5kgf · m)



○ Attach the disk rotor to the disk rotor spacer with the supplied disk bolt and lock nut, and tighten the disk rotor to the specified torque.

⚠ Note: Be sure that you protect specified torque.

Disk bolt
Torque : 25N · m (2.5kgf · m)



○ Install loosely for now the front wheel hub to the 10" aluminum wheel with a supplied flange cap screw.

※ In the case of using 06-09-033

Place the supplied spacer between the front wheel hub and aluminum wheel. Be careful to set the air valve to be on the left side when seen in the direction of travel.

