

Oil-Catch Tank Kit Instruction Manual

(Stock・Regular・R Stage/EM/+D・17R Stage E/+D) (Stock Clutch)

Product number 07-05-0012

Adaptation model Monkey / Gorilla (Z50J-1300017 ~)
(AB27-1000001 ~ 1899999)

Thank you very much for purchasing our products.

Thank you so you will comply with the following matters at the time of use. Before installation, please check your always kit contents. If there is a point of notice event, Please contact us the dealer of purchase.

◎ If the description, such as photos or Illustration different with this part.

☆ Please read carefully before use ☆

- ◎ The use ignoring the instructions that are written in the manual, if the accident or damage has occurred, we can not assume any responsibility for compensation.
- ◎ This product installation and use, when a problem occurs to after market goods, guarantee other than this product, also can not assume any in any such matters.
- ◎ If it was the case or mounting that has been processed like a product, it will not be covered under warranty.
- ◎ It is not possible to inquire of the combination of other manufacturers.
- ◎ Product may have edges or protrusions. Be sure to wear working gloves.
(Please wear work gloves when working, even if a photo in this article show without work gloves.)
- ◎ As the oil level gauge becomes unusable, check the amount of engine oil with the oil level gauge by detaching the breather cap from the gauge.
- ◎ Please note that this kit cannot be attached to a stock or up-type muffler.
- ◎ For use in bikes of frame Nos AB27-1000001 onwards, please connect an exhaust hose to an air cleaner.

Caution When the handling of ignoring this display, property damage and human shows the assumption of what injury.

- When performing the work, etc., be sure during the cold (when the engine and the muffler is cold).
(It may cause burns.)
- When performing the work, it should be made to prepare the tools for the job.
(Breakage of parts, it may cause injury.)
- Do the work must always specified torque using a torque wrench.
(Damage of bolts and nuts, and cause of dropout.)
- The product and the frame, might have edges or protrusions. When working, please wear work gloves to protect your hands.
(It may cause injury.)
- Be sure to each part inspection before operation, check the loosening of the threaded portion, be sure to securely tighten the specified torque if there is loose. (It may cause detachment of the parts.)
- Always use the catch tank with the hose connected at all times. If the tank alone is installed, the stay may get damaged from the jolt, leading to the fall of the tank.

Warning When the handling of ignoring this display people died, shows the contents of the serious injury possibility is assumed.

- During operation, when an abnormality occurs, immediately stop the vehicle in a safe place, please stop running.
(It may lead to an accident.)
- When performing the work, do the work safely stabilize the vehicle in a horizontal location.
(There is a risk of injury vehicle collapsed while working.)
- Inspection, maintenance, the instruction manual or, inspection methods such as service manuals, to protect the way, should be done correctly. (unsuitable inspection and maintenance, there is a risk that result to an accident.)
- When carrying out the inspection and maintenance, etc., if found damaged parts, replace the damaged parts to avoid possible to reuse the parts. (There is a risk that lead to accidents Continued use.)
- Plastic bags of product packaging, you can either be stored in a place that is out of reach of children, it should be discarded.
(When the children or wearing, there is a risk of suffocation.)

- ◎ Please note. Performance up, the design change, the product and the price in the cost up, etc. are subject to change without notice.
- ◎ Please be informed that we shall be held harmless against any claim against us whatsoever arising out of use of the products in racing and the like.
- ◎ Keep this manual stored until this product is discarded.

SPECIAL PARTS
TAKEGAWA

CONTACT Address : 3-5-16 Nishikiorihigashi Tondabayashi Osaka JAPAN
TEL: +81-721-25-1357 FAX: +81-721-24-5059 e-mail: english@takegawa.co.jp URL: <http://www.takegawa.co.jp>
Please contact with your name and country name provided. (Only English please)

Product content



Option

Number	Product content	Quantity	Item Number
1	Catch tank COMP.	1	07-05-0009
2	Tappet cap	1	00-07-0002
3	Oil cap	1	00-00-1431
4	O-ring, 30mm	1	00-01-0034 (4 pcs)
5	O-ring, 18mm	1	00-00-0093 (2 pcs)
6	Braid hose, 12x500	1	00-07-0069 (1m)
7	Braid hose, 8x1000	1	
8	Socket cap screw, 8x20	1	00-00-0739 (5 pcs)
9	Collar	1	00-00-2154
10	Plain washer, 8mm	1	00-00-0076 (10 pcs)
11	Hose clamp, φ 15.5	2	00-00-0215 (4 pcs)
12	Hose clamp, φ 9.5	1	00-00-0216 (4 pcs)
13	Hose clamp, φ 13.1	3	00-00-0087 (4 pcs)
14	Insulation lock, 150mm	1	00-00-0222 (10 pcs)
15	Hex wrench, 6mm	1	




※ Please order in the repair parts are always repair part number.
If it is not the part number order, you may not be able to order.
Please be forewarned.
It should be noted. In the case of parts that can not be separately shipment, please order a set part number.
※ Repair parts may differ slightly from the kit contents in terms of shape, etc. There is no problem to use it. Please be forewarned.

■ Mounting procedure ※ Please refer to the Genuine Service Manual for detailed mounting methods and specified torques that are not specifically described.

For the installation, please refer to the photos.

Bleed air, or to
the air cleaner

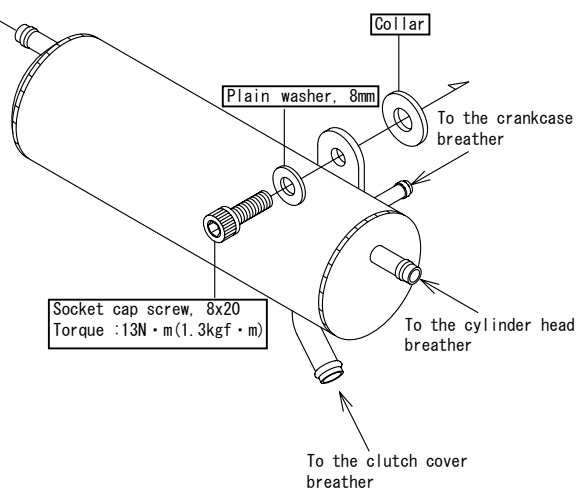

- Install the oil-catch tank onto a stock muffler-mounting spot.
- Detach a oil level gauge from the clutch cover.
Apply engine oil slightly to the O-ring, and install the oil cap.

⚠ Note: Be sure that you protect specified torque.
Oil cap
Torque : 10N · m (1.0kgf · m)




- Remove the upper part of the tappet cap from the cylinder head. Apply engine oil slightly to the O-ring, and install the tappet cap.

⚠ Note: Be sure that you protect specified torque.
Tappet cap
Torque : 12N · m (1.2kgf · m)



- Connect the hose of the crankcase breather, and fix it with a ϕ 9.5 hose clamp.
Cut the cylinder-head braid type hose 8x1000 to the proper length, and fix it with a ϕ 13.1 hose clamp.
Cut the crankcase-cover braid type hose 12x500 to the proper length, and fix it with a ϕ 15.5 hose clamp.
- Connect a drain hose, and fix it with a ϕ 13.1 hose clamp.
- ※ With a provided insulation lock, fix the hose.
- ※ When driving a motorcycle with a frame No. from AB27-1000001 onwards, connect the hose to the air cleaner.

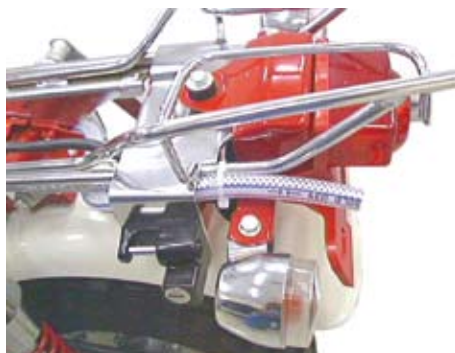

- When you connect the hose to the air cleaner, fix the hose to the storage tank.
- If you use an air filter, unfasten a bolt that mounts the storage tank. And fix the tank with an insulation lock or the like at a location so the cable does not get under too much strain.

