

If you find damaged parts when checking and performing maintenance, do not use these parts any longer, and replace them with new ones. (The continued use of these damaged parts as they are could lead to an accident.)

Please be informed that, mainly because of improvement in performance, design changes, and cost increase, the product specifications and prices are subject to change without prior notice.

This manual should be retained for future reference.

~ Kit Contents ~						
	No.	Parts Name	Qty	Repair Part Item No.	in packs of	
	1	Under fairing	1	64460-GEY-T00	1	
	2	Under fairing bracket A	2	50127-GEY-T01	1	
	3	Under fairing bracket B	1	50126-GEY-T00	1	
	4	Flange bolt, 8X16	2	00-00-0039	4	
	5	Socket cap screw, 8X75	2	00-00-0296	2	
	6	Plain washer, 8mm	2	00-00-0076	10	
	7	Flange button head socket screw, 6X12	4	00-00-0293	2	

Please note that in ordering repair parts, be sure to quote the Repair Part Item No. Otherwise, we may not be able to accept your orders. There are some parts, however, for which we are not in a position to accept your order in just the quantity to be used. In this case, please take them in the quantity packed.

- ~ Installation Procedures ~
- 1 . Secure the motorcycle on a rear service stand. Support the bottom of the engine with a jack.
- ▲ NOTE : In installing the parts, adjust the height of the jack to free the mounting bolts and others of the load.



2 . Remove two mounting bolts indicated by arrows, and install the under 4 . Install the under fairing with a 6 x 12 flange button head socket screw. fairing bracket A.

Beware of the direction of the installation. Install referring to the photos below.



In installing our aluminum engine hanger, replace the bracket-mounting bolt with an included 8 x 75 socket cap screw and 8mm plain washer. Retighten the loosened bolt.

Torque: 26 N·m (2.7 kgf·m)

- 3 . Then, remove the jack supporting the bottom of the engine. And install the under fairing bracket B onto the bolt hole in the rear part
 - of the engine bottom, using an 8 x 16 flange bolt. When installing the bracket, beware of its right direction. Install it referring to the photos below.
 - Torque: 12 N·m (1.2 kgf·m)



- Torque: 6 N·m (0.6 kgf·m)
- \triangle NOTE : The paintwork may peel off at the time of screw-tightening.



5 . If the oil cooler is connected to the clutch cover, route and install the oil lines referring to the photos below.





SPECIAL PARTS TAKEGAWA Co.,Ltd. TEL:81-721-25-1357 FAX:81-721-24-5059 URL:http://www.takegawa.co.jp 3-5-16 Nishikiorihigashi Tondabayashi Osaka Japan