


■ Fenderless Kit

GROM(JC61-1300001~)

This Fenderless kit will show the cool and sharp looks with simply replace with stock fenders.
Easy to install and can be used stock turn signal, license lamp and reflectors, no need to supply any extra parts.

- Simultaneous installation with our grab bar 09-11-1156 is possible.
- Simultaneous installation of our various winker kits is possible.
Streamline turn signal kit : Plated body 05-08-0304 / Black body 05-08-0305
Streamline LED turn signal kit : 05-08-0405

※This fenderless kit is corresponded to GROM (JC 61-1300001 ~).
※Cannot be installed to GROM(JC61-1000001 ~ 1299999), MSX125, MSX125SF.

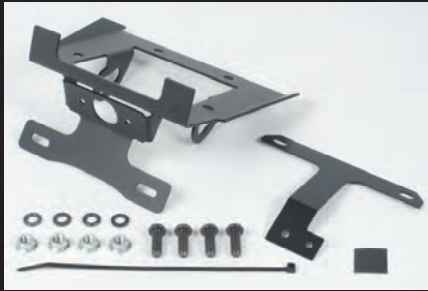

Fenderless Kit



Installation image



with Takegawa's Grab Bar

Name	Fenderless Kit
Applicable model	GROM(JC61-1300001~) ※Cannot be installed to GROM(JC61-1000001 ~ 1299999), MSX125, MSX125SF.
Item number	05-08-0411