



INSTRUCTION MANUAL FOR

Super Head+R CYLINDER KIT (138cc / SCUT)

The ceramic-coated cylinder is used.
We coated the piston with molybdenum.

Item Nos : 0 1 - 0 4 - 0 1 1 6

- Thank you for purchasing one of our TAKEGAWA's products.
- This Kit consists of a piston for exclusive use with our Super Head +R and our 138cc SCUT cylinder. The installation of our Kit and the change of a crankshaft will soup up the engine to be 138 cc.
Please strictly follow the following instructions in installing and using this kit.

Please note that, in some cases, the illustrations and photos may vary from the actual hardware.

Please read the following instructions before installation.

This kit is for exclusive use with our Super Head +R cylinder head and our crank of 01-10-0092.

We do not take any responsibility for any accident or damage whatsoever arising from the use of the products not in conformity with the instructions in the manual.

We shall be held free from any kind of warranty whatsoever of products other than this product if the glitch takes place on the other products than this one after the installation and use of this product.

In some cases sounds coming from the cylinder may sound louder than stock.

It is advisable to install an oil cooler for driving at a high outdoor air temperature.

Please be informed that we shall be held harmless against any claim against us whatsoever arising out of use of the products in racing and the like.

	Caution	The following show the envisioned possibility of injuries to human bodies or property damages as a result of disregarding the following cautions.
<ul style="list-style-type: none"> • Since this kit is designed and developed for driving in closed races, do not use the kit for running on public roads. • Work only when the engine and the muffler are cool. (Otherwise, you will burn yourself.) • Prepare right tools for the work, and do the work in the proper and right way. (Otherwise, improper work could cause breakage of parts or injuries to yourself.) • As some products and frames have sharp-pointed or protruding portions, please work with greatest care. (Otherwise, you will suffer injuries.) 		

	Warning	The following show the envisioned possibility of human death or serious injuries to human bodies as a result of disregarding the following cautions.
<ul style="list-style-type: none"> • Those who are technically unskilled or inexperienced are required not to do the work. (Improper installation due to unskilled technique or lack of knowledge could lead to parts breakage and consequently to accidents.) • Always use new piston pin circlips, gaskets and packing. (Wear and damage to these parts are likely to cause parts breakage and accidents.) • Before doing work, place the motorcycle on level ground to stabilize the position of your motorcycle for safety's sake. (Otherwise, your motorcycle could overturn and injure you while you are working.) • If you find damaged parts when checking and performing maintenance of your motorcycle, do not use these parts any longer, and replace them with new ones. The continued use of these damaged parts as they are could lead to accidents.) • Always start the engine in a well-ventilated place, and do not start it in an airtight place. (Otherwise, you will suffer from carbon monoxide poisoning.) • Before riding, always check every section for slack in parts like screws. If you find slack ones, screw them up securely to the specified torque. (Or improper torque may cause parts to come off, leading to accidents.) • When you notice something abnormal with your motorcycle while riding down a road, immediately stop riding and park your motorcycle in a safe place. (Otherwise, the abnormality could lead to accidents.) • As gasoline is highly flammable, never place it close to fire. Make sure that nothing flammable is near the gasoline. (Otherwise, there will be a danger of causing fires.) • Check or perform maintenance of parts correctly according to the procedures in the instruction manual or a service manual. (Improper checking or maintenance could lead to an accident.) • Never use any other part than the specified parts. (Otherwise, there is a possibility of parts breakage, leading to accidents.) • Always use a torque wrench to screw bolts and nuts tight and securely to the specified torque. (Otherwise, improper torque may result in the breakage or coming off of the bolts and nuts, leading to accidents.) • As the accumulation of vaporized gasoline is at the high risk of explosion, work in a well-ventilated place. • Always use high-octane gasoline. (Otherwise, troubles such as engine knocking may cause accidents.) 		

Please be informed that the product specifications, design and prices are subject to change without prior notice.
We shall be held free from any guarantee whatsoever of any trouble caused by the combined use of our products with parts not specified by us.
This manual should be retained for future reference.

**We recommend installation of an Automatic Decompression Camshaft Kit for use with this 138cc Kit.
If the automatic decompression camshaft is not installed, the parts likely get damaged at the time of starting the engine.**


Automatic Decompression Camshaft Kit (w/left side cover)

S	1 2 D	0 1	0 8	0 1 0 7
S	1 5 D	0 1	0 8	0 1 0 8
S	2 0 D	0 1	0 8	0 1 0 9
S	2 5 D	0 1	0 8	0 1 1 0
S	3 0 D	0 1	0 8	0 1 1 1
S	3 5 D	0 1	0 8	0 1 1 2

An automatic decompression camshaft

S	1 2 D	0 1	0 8	0 1 0 1
S	1 5 D	0 1	0 8	0 1 0 2
S	2 0 D	0 1	0 8	0 1 0 3
S	2 5 D	0 1	0 8	0 1 0 4
S	3 0 D	0 1	0 8	0 1 0 5
S	3 5 D	0 1	0 8	0 1 0 6

~ Kit Contents ~

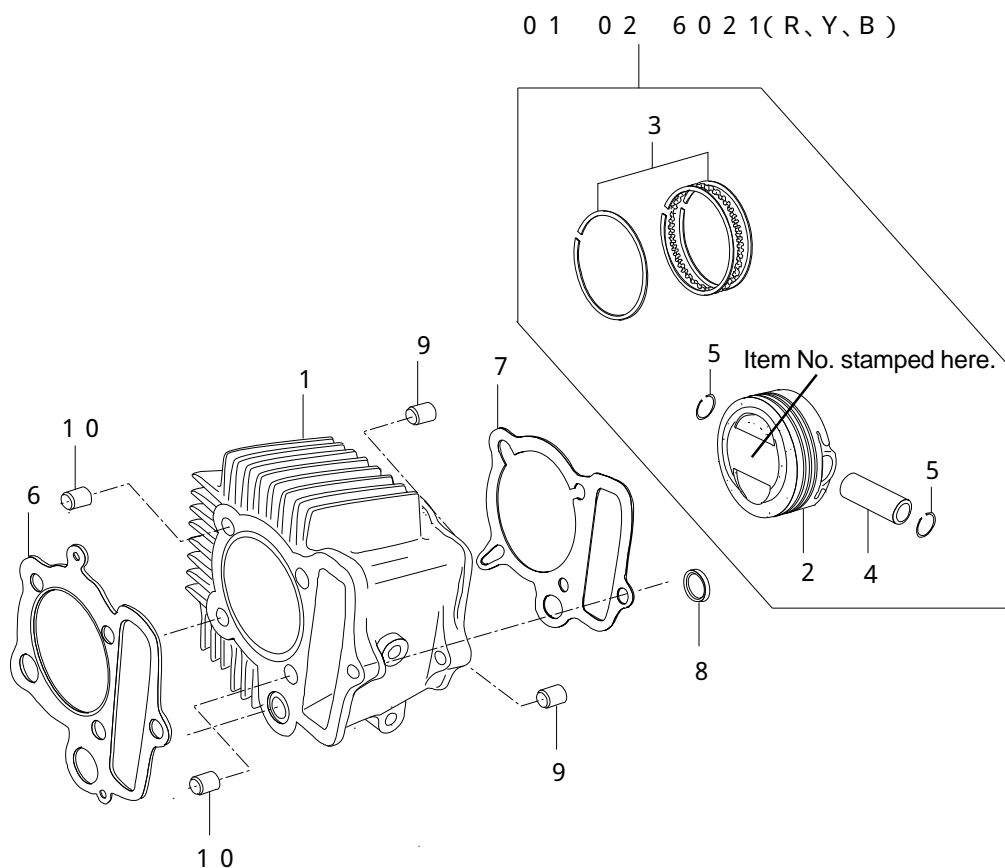

No.	Parts Name	Qty	Repair Parts Item No.	in packs of
1	Aluminum cylinder	1	_____	_____
2	Piston (Molybdenum coated)	1	13109-2HT-T20R	1
			13109-2HT-T20Y	1
			13109-2HT-T20B	1
3	Piston ring set (TOP, OIL)	1	13012-RAS-T00	1
4	Piston pin	1	00-01-0114 (with two circlips)	1SET
5	Piston pin circlip	2	00-01-0052	6
6	Cylinder head gasket	1	01-13-0606	1
7	Cylinder gasket	1		1
8	Rubber packing (black)	1		1
9	Dowel pin, 8x12	2	00-01-0090	2
10	Dowel pin, 8x14	2		2

Three types of pistons with different Item Nos. are available as repair parts.

Prior to ordering the Kit, check the Item No. stamped on the top of the piston.

Please note that in ordering repair parts, be sure to quote the Repair Part Item No.

Otherwise, we may not be able to accept your orders.

There are some parts, however, for which we are not in a position to accept your order in just the quantity to be used. In this case, please take them in the quantity packed.

In ordering a Piston Kit, please add R, Y. or B to the end of the Item No. 01-02-6021.

For details, see the Owner's Manual.

SPECIAL PARTS TAKEGAWA Co.,Ltd.

3-5-16 Nishikiorihigashi Tondabayashi Osaka Japan

TEL : 81-721-25-1357 FAX : 81-721-24-5059

URL : <http://www.takegawa.co.jp>


~ Installation Procedures ~

⚠ Caution : Always be sure to tighten parts to the specified torque using a torque wrench.

⚠ Warning: The unskilled or those without proper knowledge are requested not to do the installation work.

The following show the products of our own make to which this kit cannot be installed.

On the use of an old-type inner rotar CDI

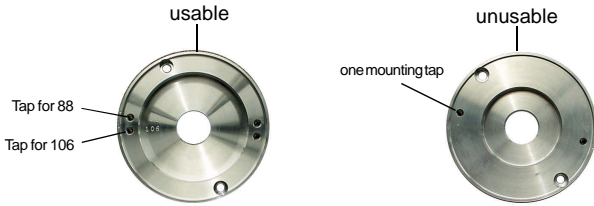

Some products involve detachment and installation of an engine and separation of a crankcase, etc. Do the installation work infallibly, following Honda's genuine parts service manual.


Referring to the service manual, detach the engine from the frame and disassemble it.

Check every part.

⚠ Caution: Infallibly inspect every part and check consumable parts for damage and wear.

~ Cylinder Installation Procedures ~

Attach the piston circlip on the right with the stamped arrow in the lower part when the piston is viewed from the above.

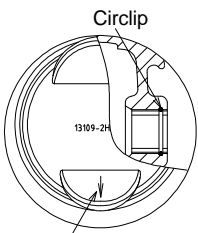

Stamped arrow

Be sure to install the circlip in the direction as shown in the above figure.

Attach the piston pin circlip so the ring end gap does not meet with the notch on the piston pin hole, and it should be either on the top or at the bottom of the piston as illustrated in the fig. 1 below.




Notch in the piston hole

Circlip ring-end gap

Air-blow the piston rings and the piston pin, and check for jamming of any foreign material by these parts.

Apply engine oil to grooves for piston rings, and, with reference to the figure below, fix piston rings and arrange the location of piston ring end gaps.

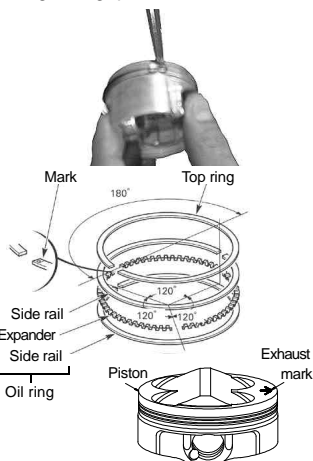

Apply molybdenum solution to the piston pin and the holes on the connecting rod small end.




Install the piston to the connecting rod so the IN mark on the piston faces the intake side.

If you find it hard to put in the pin, put it in slowly with a marking pen or the like. Never hit it in.



Plug the sleeve hole and the cam chain hole on the crankcase with a clean cloth, and fix a piston pin circlip.

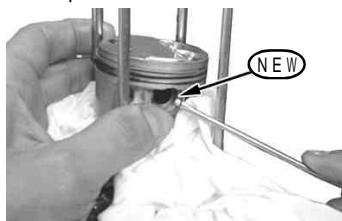


Remove the cloth used to plug holes.


Degrease the cylinder base of the crankcase, and fix 8 x 12 dowel pins onto the dowel pin holes.



Fix a cylinder gasket of the kit into the cylinder base of the crankcase.

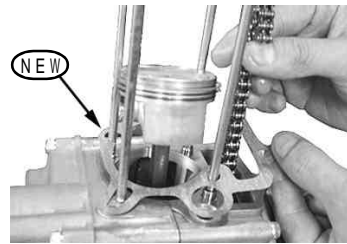

Fix a new rubber packing (black) of the kit onto the oil-return hole on the cylinder base of the crankcase.

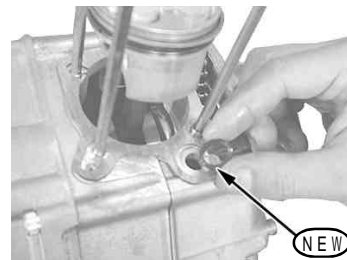

Apply engine oil to the entire inner surface of the aluminum cylinder bore.



Insert the aluminum cylinder into the stud bolts.




Compressing the piston rings, install the cylinder with care not to move the piston-ring end gaps out of place. Their end gaps will not be out of place.

⚠ CAUTION: Be careful not to damage the piston rings.



Place the cam chain guide roller on the cam chains.

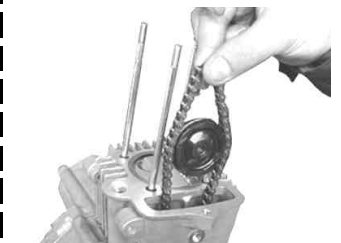

Loosely tighten the cam chain guide roller and the cylinder side bolt.



Loosely tighten an original hex bolt which holds the crankcase on the cylinder side.

Install the cylinder head with reference to the instruction manual.

Owner's Manual

WARNING

Since this cylinder head manual is prepared for those who have acquired basic skills and knowledge in tuning, those who are technically unskilled or inexperienced are required not to do the work.

Reference Value List for Cylinder and Piston Maintenance

Item			Stock	Service limit	Remarks		
Cylinder	Distortion		—————	0.05 mm	Replace		
	Internal diameter	57	—————	57.03 mm	Replace		
Piston	External diameter (6.5 mm from the hem of a skirt)	57	—————	56.96 mm	Replace		
	Internal diameter of a pin hole		13.002 ~ 13.008 mm	13.03 mm	Replace		
External diameter of a piston pin			13.994 ~ 14.000 mm	13.98 mm	Replace		
Piston ring end gap size				Top	0.15 ~ 0.38 mm	0.50 mm	Replace
				Oil	0.20 ~ 0.70 mm	0.90 mm	Replace
Clearance between cylinder and piston				0.005 ~ 0.035 mm	0.07 mm	Replace	
Clearance between piston and pin				0.002 ~ 0.014 mm	0.05 mm	Replace	

 This mark shows molybdenum solution.


This solution is a mixture of molybdenum grease and engine oil (in the ratio of 1:1).

Apply molybdenum solution or assembly paste to the portions where it is indicated that molybdenum solution needs to be applied.

Owner's Manual

Inspection of Cylinder

- Check the inside of cylinder for wear and damage.
- Measure the internal diameters of the cylinder bore at 6 positions; at the piston pin angle and at the right angle to it (X-Y) each at upper, middle and lower parts of the cylinder bore. Treat the largest value as its internal diameter.
If larger than 57.10mm at 57, replace it.
Calculate the clearance between a cylinder and a piston.

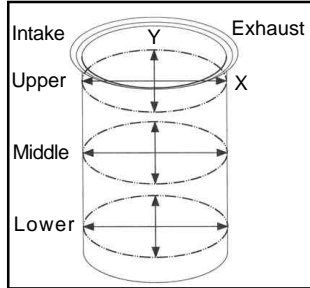


In case the cylinder wall is beyond the service limits, change the cylinder and piston at the same time as a set.

Cylinder wall

	Piston part number
56.990 ~ 56.998	13109-2HT-T20B
56.999 ~ 57.009	13109-2HT-T20Y
57.010 ~ 57.020	13109-2HT-T20R

- Check the top surface of the cylinder for scratches and damages.
- Check the cylinder top surface for distortion with a straight edge and thickness gauge.
Service limit: If the distortion is more than 0.05 mm, replace the cylinder.

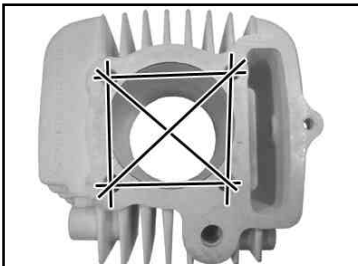

Inspection of Piston

- Clear the piston of the remaining carbon residue.
- Fit a piston ring into the piston, and measure the clearance between the piston ring and ring groove with a thickness gauge.
If larger than 0.17mm, replace it.
- Check the piston for damages.
- Measure the external diameter of the piston at the specified place at the bottom edge of the piston skirt at the right angle to the piston holes.
If smaller than 56.96mm at 57, replace it.
- Calculate the clearance between the cylinder and the piston.
If larger than 0.07mm, replace it.
- Measure the internal diameter of the piston pin hole.
If larger than 14.03mm, replace it.
- Calculate the clearance between the piston and the piston pin.



Inspection of Piston Ring

- Press down a piston ring into the piston with the piston head, and measure the clearance of the ring-end gap at the horizontal position with a thickness gauge.
Top : If larger than 0.5mm, replace them.
Oil : If larger than 0.9mm, replace it.




Supplement:

- A number and an alphabet are stamped on the top and side of the cylinder respectively.
In case you cannot measure the cylinder wall, you can designate the type of the cylinder and order it by the stamped numbers.
This is limited only to the case where there is no damage or scratch on the cylinder wall.

In case you judge by the piston:


- After removing the carbon stuck on the piston top, take a note of the No. stamped on the piston top.

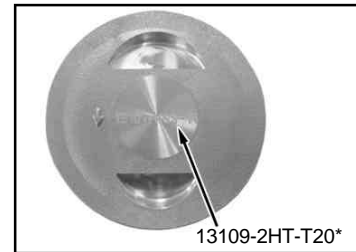

- Order the piston by the No. stamped on the piston top.

In case you judge by the cylinder:

- Take a note of the No. stamped on the side of the cylinder.

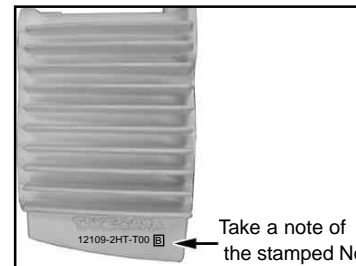

	Piston part number
When an R is stamped	13109-2HT-T20R
When a Y is stamped	13109-2HT-T20Y
When a B is stamped	13109-2HT-T20B